


CirrusSense™ TDWLB & TDWLB-DL Battery Replacement with TDWLB-G2-BAT



DESCRIPTION

When replacing your TDWLB or TDWLB-DL battery, please follow the important procedures listed below:

1. Remove the Cap by turning it counter clockwise (see below photo)
2. Place a small screw driver blade between plug and socket and pry up to remove plug from socket. Plug only fits one way. Remove battery.
3. Wait a minimum of 90 seconds before inserting the new battery. The transducer needs to reset before connecting new battery.
4. If your sensor includes a temperature probe, BEFORE replacing battery, ensure the temp probe is connected to the M5 connector PRIOR TO connecting the battery.
5. Replace properly, the old Cap O-ring with new one supplied (older models)..
6. Replace cap turning it clockwise until it stops, lining up the arrows.

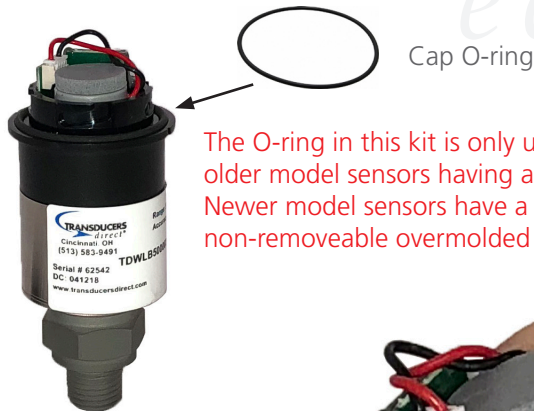

The O-ring in this kit is only used with older model sensors having an O-ring. Newer model sensors have a permanent non-removeable overmolded flat gasket.



To Remove Cap

