


# CirrusSense™ TDWLB-LC Battery Replacement with TDWLB-LC-BAT2

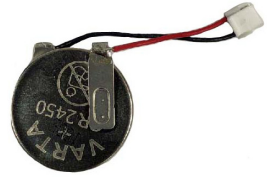

## DESCRIPTION

When replacing your TDWLB-LC battery, please follow the important procedures listed below:

1. Remove the top by turning it counter clockwise (see below photo). Depress locking tab on battery plug and remove the plug from the socket (Fig1). Remove battery by pushing it out to the right and support the circuit board with your other hand which will make it easier while you are pushing the battery out of the plastic holder which is flexible (Fig2). Install the new battery from the right side pushing it into the holder to the left and again support the circuit board while you are pushing the battery into the holder. Battery only goes in with front side (+) facing out. Solder tabs straight up (Fig3).
2. Wait a minimum of 90 seconds before connecting the new battery as the transducer needs to reset. Battery plug fits one way only.
3. Replace properly, the old top O-ring with new one supplied.
4. Replace top turning it clockwise until it stops, lining up the arrows.

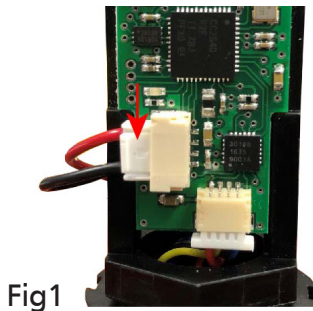


Fig1



Fig2



Fig3