

CirrusSense Router Quick Start Guide


by Transducers Direct

Connect your router


- 1) First, if you're going to [connect](#) to the internet via a wired connection, connect an Ethernet cable to the Ethernet port on the back of the CirrusSense Router.
 - If you're connecting wirelessly, just proceed to the next step.
- 2) *If you're connecting wirelessly*, connect the Power Adapter into the CirrusSense Router, then plug the adapter into a power outlet.
- 3) Wait approximately 1 minute for the CirrusSense Router to come online. After 1 minute, you can proceed to the next steps below.

Configure your router for internet access


- 1) If you have opted for a wired Ethernet connection, and your local network supports DHCP, then your router is configured and no additional setup will be needed. If you wish to use a wireless network for internet access, you can proceed to the next steps below.
- 2) Download the Transducers Direct TDWLB app
 - [iOS \(Apple App Store\)](#)
 - [Android \(Google Play Store\)](#)

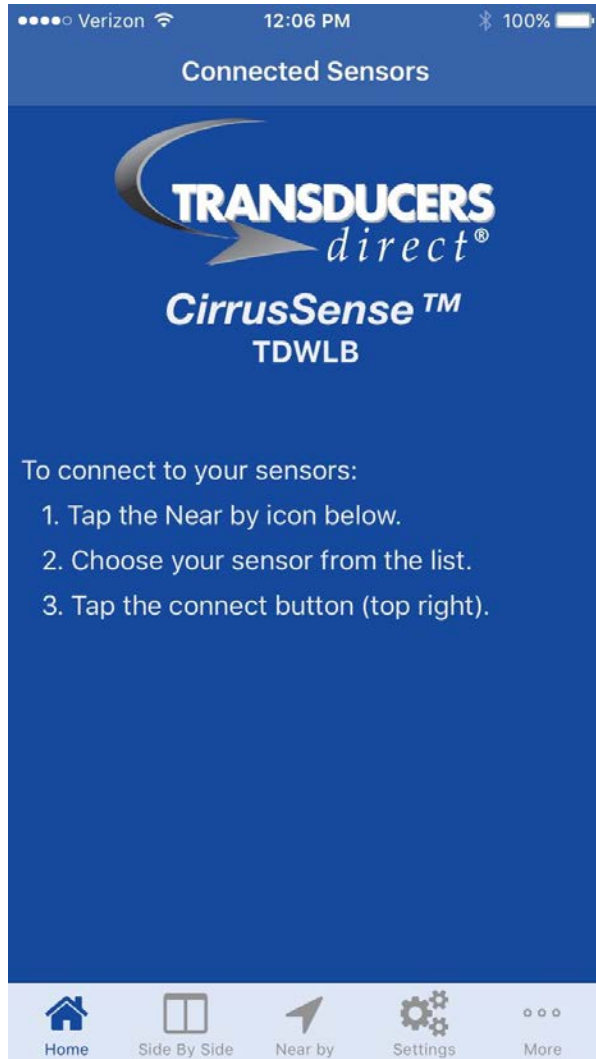


- 3) Launch the Transducers Direct TDWLB app

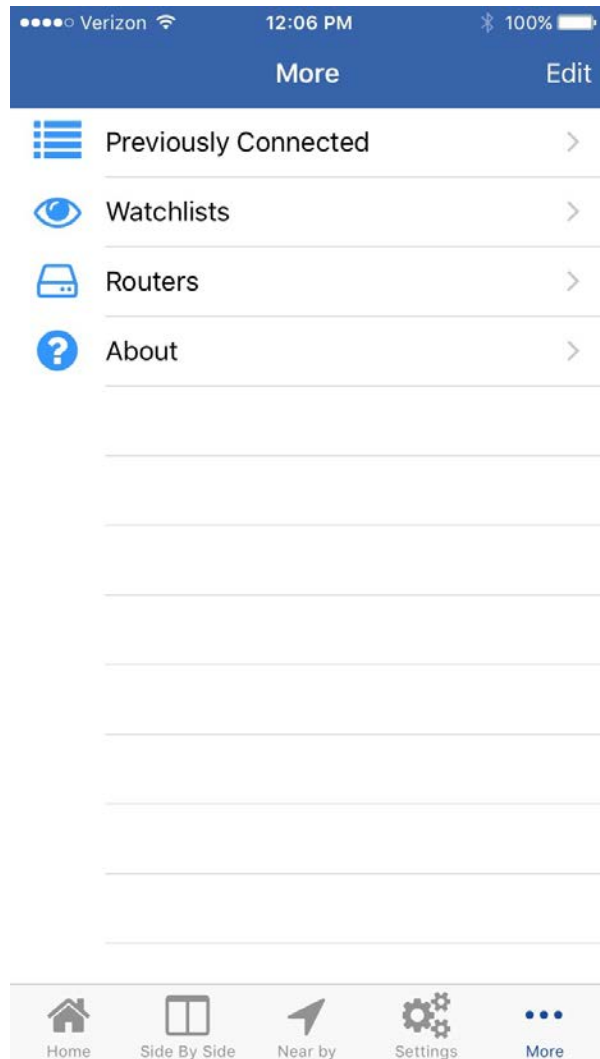

- 4) Locate the "Routers" icon in the tab bar at the bottom of the app screen. If you are on an iPhone, you will need to touch the "More" icon to display the "Routers" icon. Touch the "Routers" icon to begin the setup process.

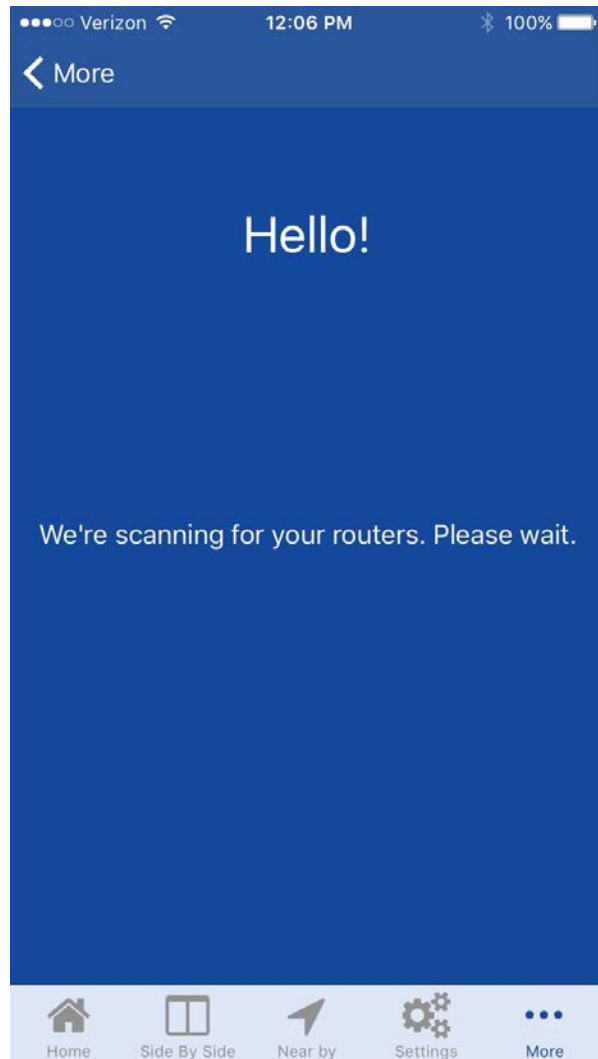


- 5) The Transducers Direct TDWLB app will search for your router, and will connect automatically once it is found. *To ensure a successful connection, please be within 10 feet of your router.*

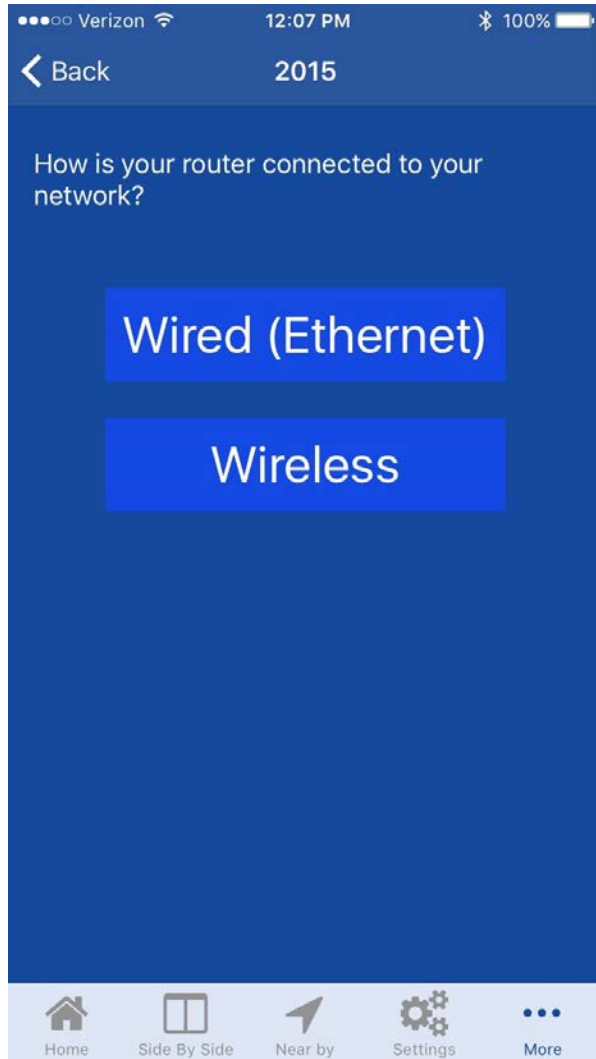


- 6) Choose the type of internet connection you wish to use.




- 7) If you chose "Wireless": The router will scan for nearby wireless networks. Scanning for networks takes approximately 10 seconds.

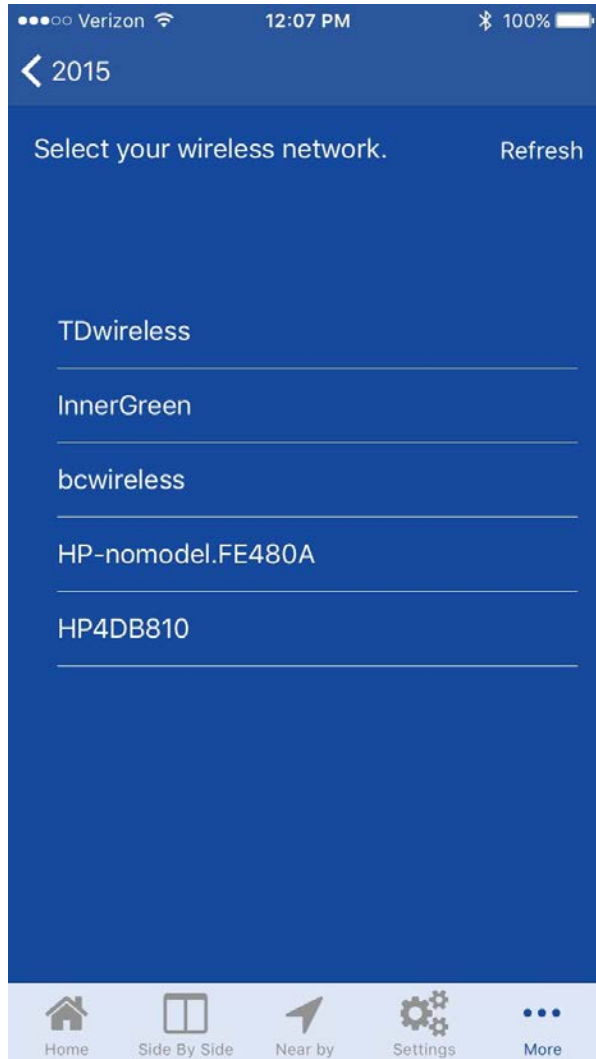

8) Choose your wireless network from the list.

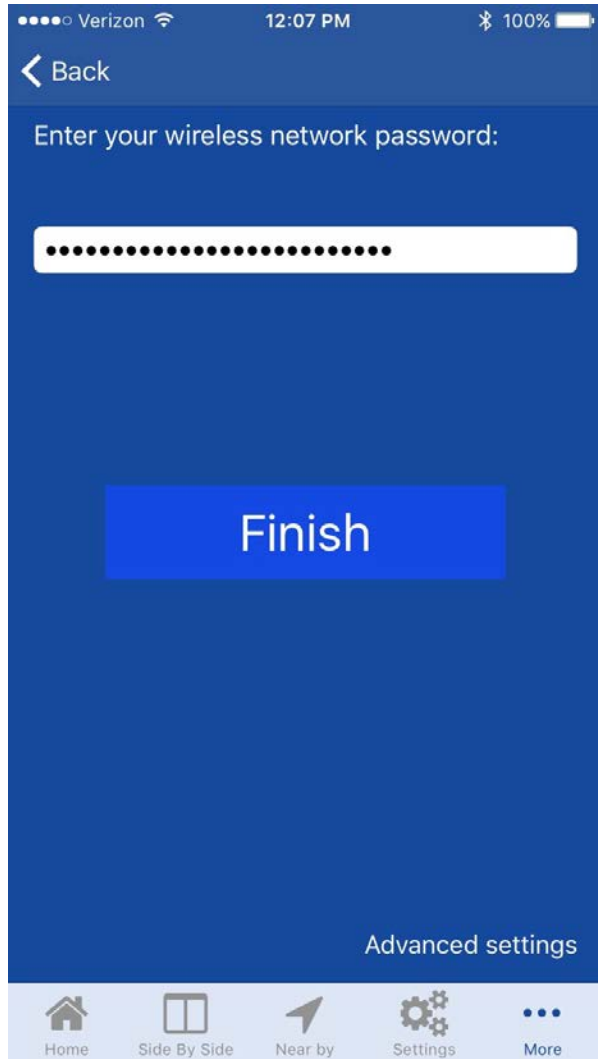


9) Enter your wireless network password.

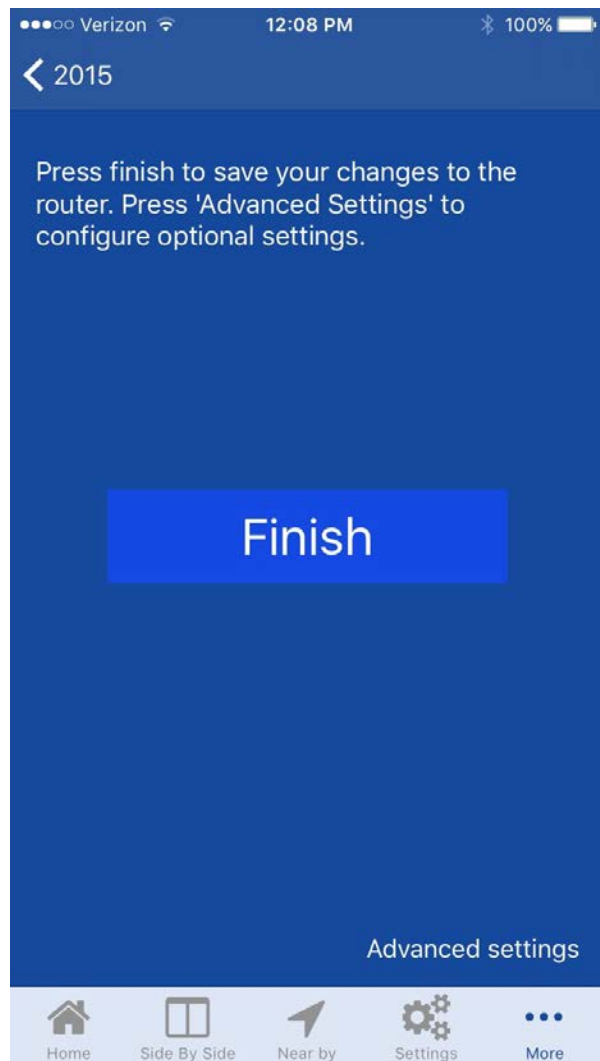

10) If you chose "Wired" and you do not need to set any advanced settings, touch "Finish" to complete the setup. To modify advanced settings, proceed to the next steps below.

Advanced Settings

If you do not have a DHCP server on your network, or if you would like to specify a static IP address, or static nameservers, follow the steps below.

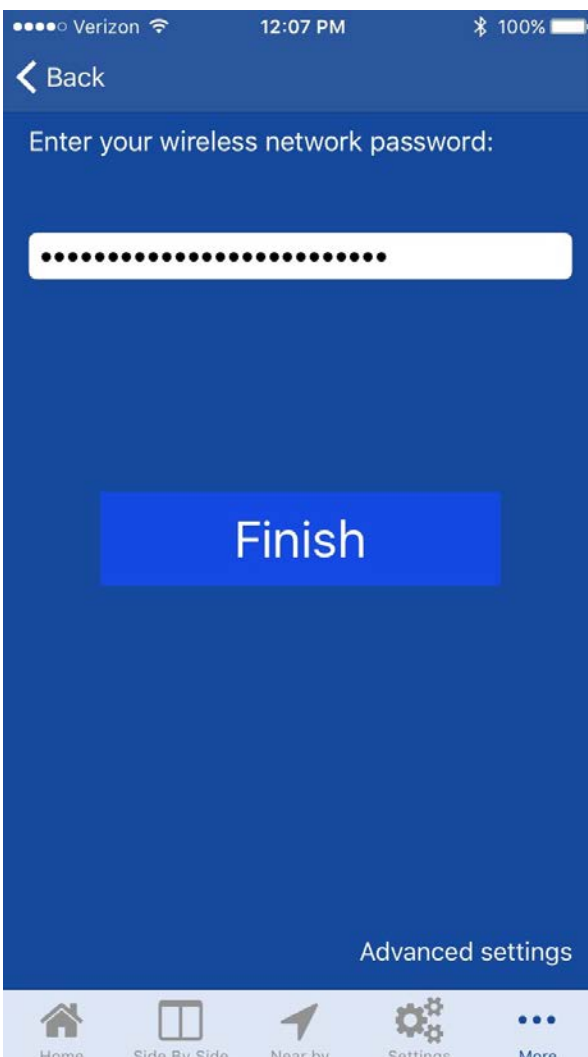	<ol style="list-style-type: none">1) Touch "Advanced settings" after entering your wireless network password, or after choosing a wired network connection.
--	---

Done

Use DHCP

STATIC IP INFORMATION


IP Address	192.168.0.131
Gateway	192.168.0.1
Netmask	255.255.255.0


NAMESERVERS

Nameserver 1	8.8.4.4
Nameserver 2	8.8.8.8

- 2) To set a static IP address, disable the "Use DHCP" option. Once disabled, you will be able to provide a static IP, netmask and gateway for the router. You can also specify custom name servers. When your custom network configuration is complete, press the "Done" button.

Saving your router configuration

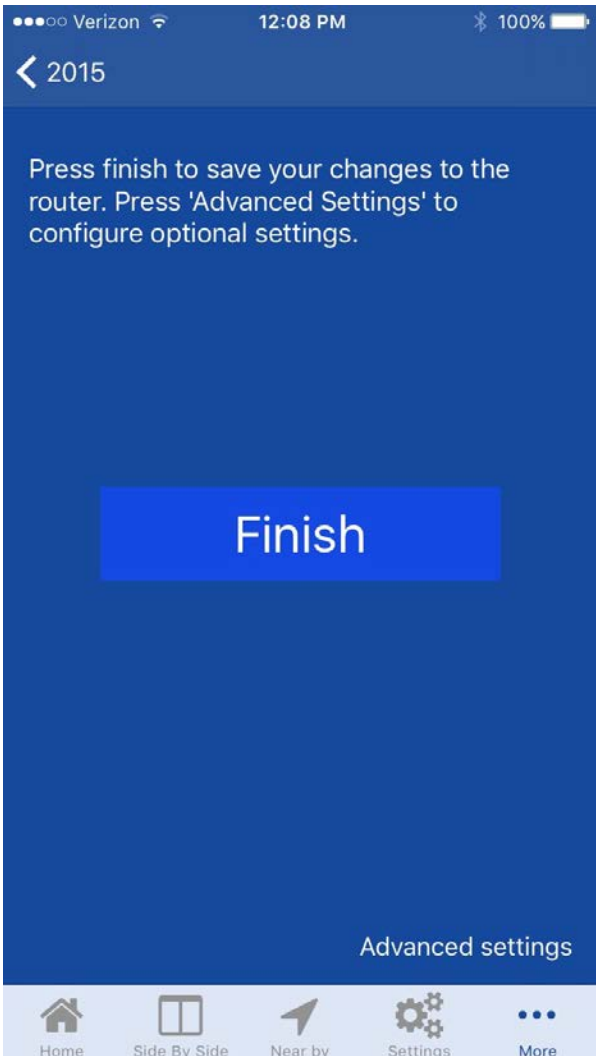 <p>The screenshot shows a mobile application interface with a dark blue background. At the top, the status bar displays 'Verizon', '12:08 PM', and '100%' battery. Below the status bar is a navigation bar with a back arrow and the text '2015'. The main content area contains the text: 'Press finish to save your changes to the router. Press 'Advanced Settings' to configure optional settings.' A large blue button with the word 'Finish' in white is centered on the screen. At the bottom right of the main content area, the text 'Advanced settings' is visible. The bottom of the screen features a light blue navigation bar with five icons: a house icon labeled 'Home', a window icon labeled 'Side By Side', a location pin icon labeled 'Near by', a gear icon labeled 'Settings', and a three-dot icon labeled 'More'.</p>	<p>1) Press the Finish button.</p>
---	------------------------------------

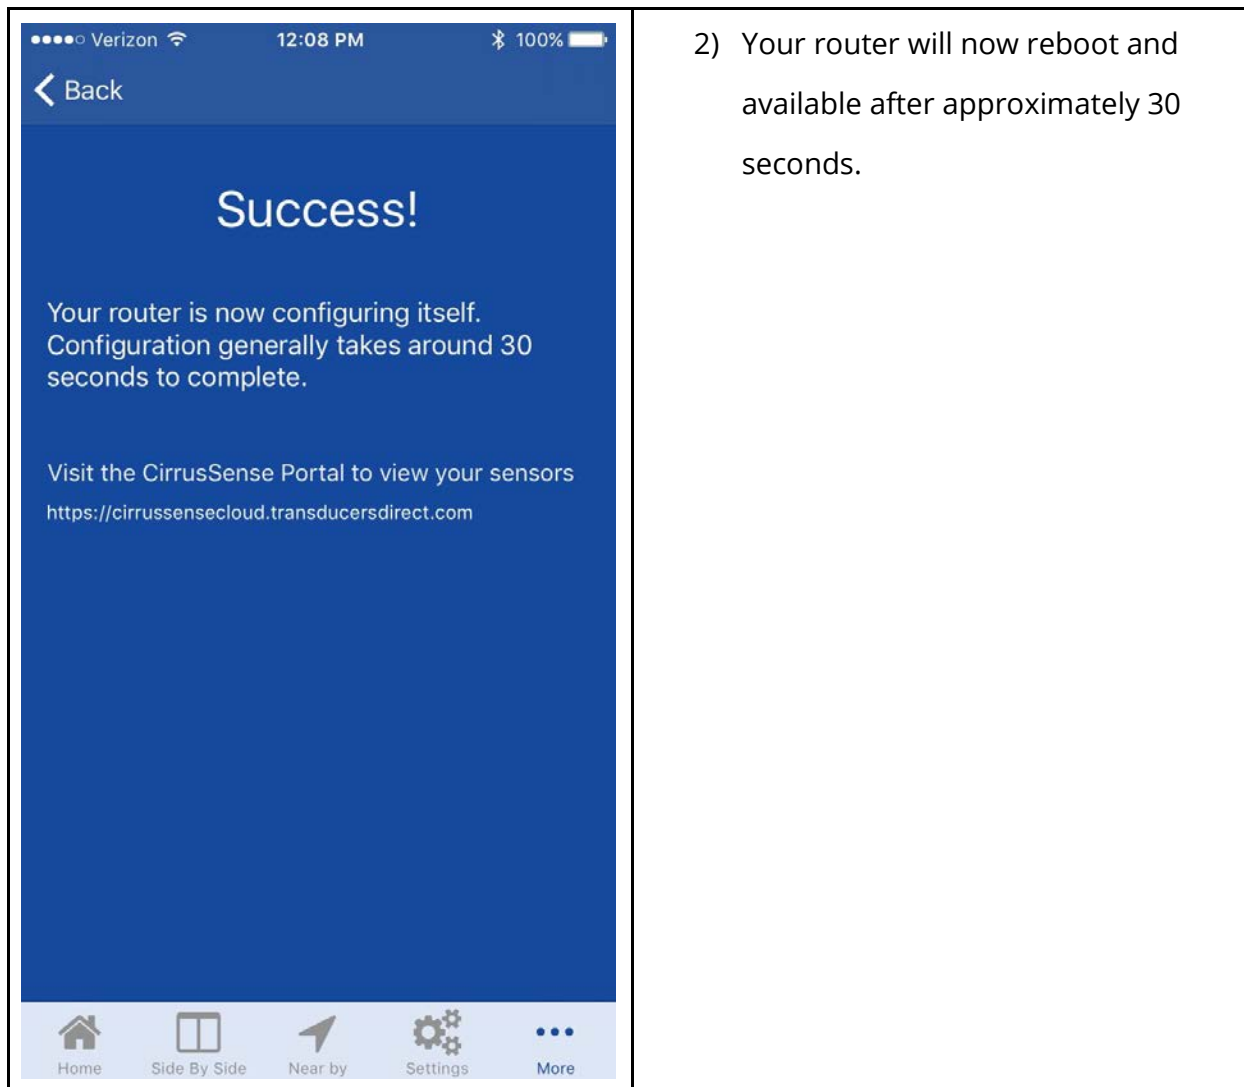

Online CirrusSense Cloud Portal account setup

- 1) On an internet connected browser, go to
<https://cirrussensecloud.transducersdirect.com/Account/Register>
- 2) Create a new CirrusSense account.
 - a) When creating an account, be sure to input your Subscription Code that has been printed on your invoice and packing slip.

Accessing your router and sensor data

- 1) Once your account has been created, you will be taken to the Routers page. Click the Add button to add your router to your account.
- 2) Enter the serial number printed on the label of your router, and click Save.
- 3) Your router will now be displayed on the screen.
- 4) Click Details to view the live sensor data for your router.